


ASSEMBLY & USER MANUAL

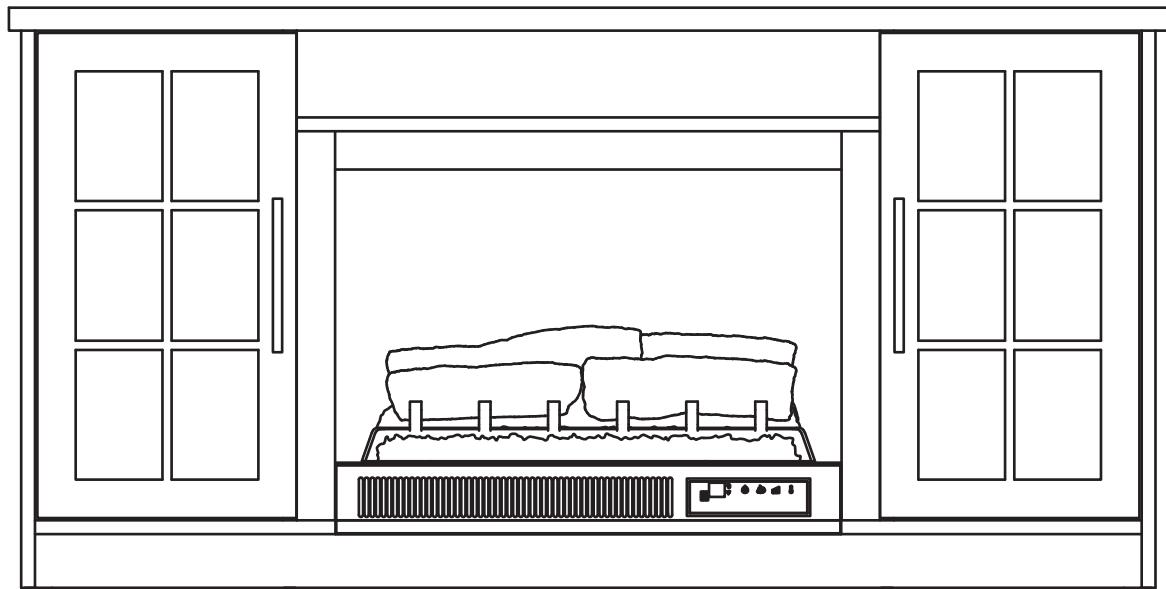

QUESTIONS, PROBLEMS, MISSING PARTS?
BEFORE RETURNING TO THE STORE, CALL

Customer Service:

8am-5pm CST, Monday - Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

THANK YOU

We appreciate the trust and confidence you have placed in Country LivingTM through the purchase of this electric fireplace. We strive to continually create quality products designed to enhance your home.

Visit us on-line to see our full line of products available for your home improvement needs.

Thank you for choosing Country Living!

Important Safety Instructions

Please read and understand this entire manual before attempting to assemble, operate or install the product.

IMPORTANT NOTICE

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock and injury to persons, including the following:

WARNING: Place this unit in a location that avoids direct sunlight and high temperatures.

WARNING: Plastic bags, nails, etc. should be kept out of reach of children.

WARNING: This appliance is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains, at least 3 feet from the front of the heater and keep them away from the sides and rear.

WARNING: Extreme caution is necessary when any heater is used by or near children or individuals with disabilities and whenever the fireplace is left operating and unattended.

WARNING: DO NOT use extension cord with ANY heating appliance.

WARNING: DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar covering. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and where it will not be tripped over.


WARNING: DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause overheating and fire.

WARNING: This appliance has hot and arcing or sparking parts inside. DO NOT use it in or around flammable liquids, fabrics, decorations, or Christmas stockings.

WARNING: Do not plug the insert into the power outlet before you read all instructions.

Maximum Load Warnings

Top Max. 100 lbs. 45 kg / 65" Screen Size

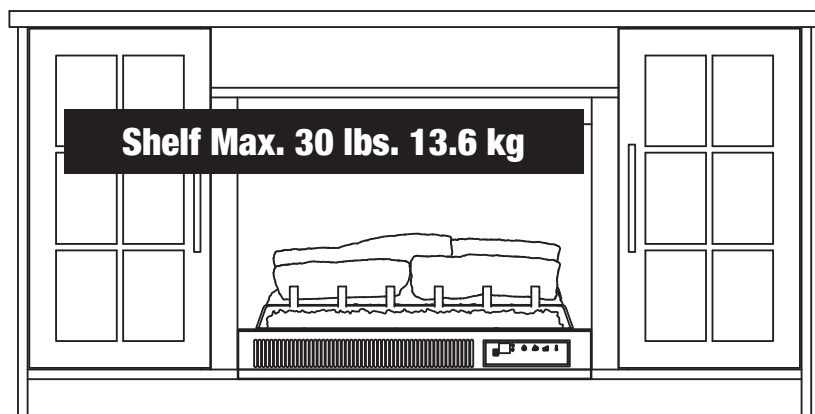

Shelf Max. 30 lbs. 13.6 kg

WARNING!

Never use this furniture with a TV that is too large or too heavy. Severe injury or death can occur. The TV and furniture will be unstable and may tip.

- The TV must weigh less than 100 lbs.
- The base of the TV must be able to sit completely on the shelf.

For use with flat panel televisions measuring 65 in. wide or less.

Refer to instruction book for complete safety information.

CAUTION: This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability, causing possible injury.

NOTE: Flat panel TVs with base supports should be placed squarely in the center of the stand with no overhang on any side.

Important Safety Instructions

PLEASE RETAIN THIS USER'S GUIDE FOR FUTURE REFERENCE

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this fireplace.
2. **This fireplace is hot when in use.**
To avoid burns, do not let bare skin touch hot surfaces. The grill directly in front of the heater outlet becomes hot during heater operation. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains, at least 3 feet from the front of the unit and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children, elderly or the handicapped and whenever the fireplace is left operating and unattended.
4. Always unplug fireplace when not in use.
5. Do not operate any fireplace with a damaged cord or plug, if the heater has malfunctioned, or if the fireplace has been dropped or damaged in any manner. Take fireplace to an authorized service facility for examination, electrical or mechanical adjustment or repair.
6. Do not use outdoors.
7. This fireplace is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate fireplace where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect fireplace, turn controls to off, and then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
11. Connect to properly grounded outlets only.
12. To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. All electrical heaters have hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Use this fireplace only as described in this manual. Any other use not recommended by manufacturer may cause fire, electric shock, or injury to persons.
15. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.14 AWG minimum size and rated not less than 1875 watts.
16. When storing or transporting the unit and cord, keep it in a dry place, free from excessive vibration and store so as to avoid damage.
17. Hypothermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
18. To avoid excessive room temperatures which can cause hyperthermia, DO NOT leave product running unattended in a confined space around infants or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Warranty

1-YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from manufacturing and material defects for a period of one (1) year from date of purchase, subject to the following conditions and limitations:

1. The electric fireplace must be installed and operated at all times in accordance with the installation and operating instructions furnished with the product. Any unauthorized repair, alteration, willful abuse, accident, or misuse of the product shall nullify this warranty.
2. This warranty is non-transferable and is made to the original owner, provided that the purchase was made through an authorized supplier.
3. The warranty is limited to the repair or replacement of part(s) found to be defective in material or workmanship – provided that such part(s) has (have) been subjected to normal conditions of use and service – after said defect is confirmed by the manufacturer's inspection. All replacement parts or products will be new, re-manufactured, or refurbished.
4. The manufacturer may, at its discretion, require that any defective part(s) be returned in exchange for the replacement part(s).
5. The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective parts(s).
6. This warranty does not cover the LED light bar included with the electric fireplace.
7. Any installation, labor, construction, transportation, or other related costs/expenses arising from defective part(s), repair, replacement, or otherwise of same, will not be covered by this warranty, nor shall the manufacturer assume responsibility for the same.
8. The owner/user assumes all other risks – if any – including but not limited to the risk of any direct, indirect or consequential loss or damage arising out of the use or inability to use the product, except as provided by law.
9. All other warranties – expressed or implied – with respect to the unit, its components and accessories, or any obligations/liabilities on the part of the manufacturer are hereby expressly excluded.
10. The manufacturer neither assumes nor authorizes any third party to assume on its behalf any other liabilities with respect to the sale of the unit.
11. The warranties as outlined within this document do not apply to non-accessories used in conjunction with the installation of this product.
12. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty is void if:

- (a) The fireplace is subjected to prolonged periods of dampness or condensation.
- (b) There has been any unauthorized alteration, willful abuse, accident, or misuse of the product.
- (c) You do not have the original purchase receipt.

WARNING!

 
1. Do not let any sharp objects touch or rub the surface of the product.
2. When assembling, do not let children play around the working area.
3. Please confirm all parts are CORRECT BEFORE STARTING THE ASSEMBLY PROCESS.
4. Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
5. DO NOT USE POWER TOOLS. Power tools can over-tighten screws and strip threads.

Hardware Identification

IMPORTANT INFORMATION


1. Before you begin, locate the instructions and hardware. Be sure you have all of the parts and can identify them.
2. To avoid scratching the finish, assemble the product on a soft, non-abrasive surface such as carpet, thick bedding, or a moving blanket.
3. Assembly of this product may require more than one person.

Parts list

REF NO	DESCRIPTION	QTY
U1: Bolt		39 PCS
U2: Cam		39 PCS
U3: Screw		16 PCS
U4: Leveler		4 PCS
U5: Glass Mounting Bracket		2 PCS
U6: Screw		6 PCS
U7: Screw		34 PCS
U8: Screw		24 PCS
U9: Hinge		4 PCS
U10: Bolt		4 PCS
U11: Door Pull		2 PCS
U12: Shelf Pin		8 PCS
U13: Wire Management Hardware		3 PCS
U14: Corner Caps		4 PCS
U15: Touch Up Paint/Stain		1 PC
U16: White Stickers		14 PCS

Preparation

Mantel Parts List					
A	Mantel Top	x1	J	Left Back Panel	x1
B	Center Upper Back Panel	x1	K	Right Back Panel	x1
C	Center Shelf	x1	L	Left Door	x1
D	Mantel Base	x1	M	Right Door	x1
E	Left Interior Panel	x1	N	Storage Shelf	x2
F	Right Interior Panel	x1	O	Insert Surround Top	x1
G	Left Side Panel	x1	P	Insert Surround Left Side	x1
H	Right Side Panel	x1	Q	Insert Surround Right Side	x1
I	Base Recess Toe Kick	x1	R	Insert Brick Back Panel	x1
			S	Front Glass	x1

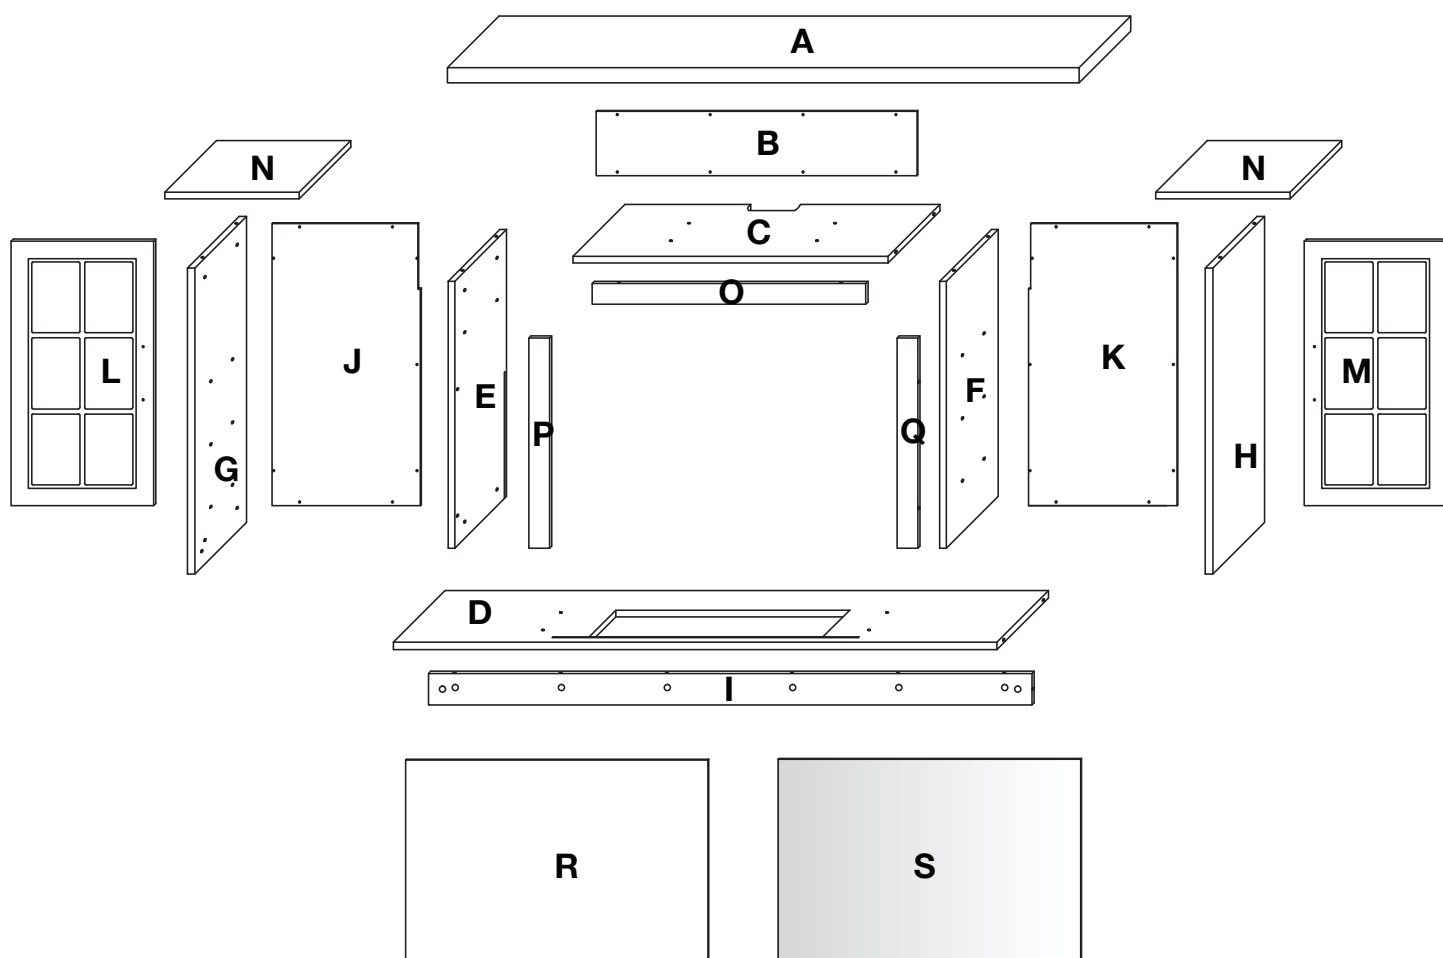


Tools Required




Phillips Head Screwdriver

OR

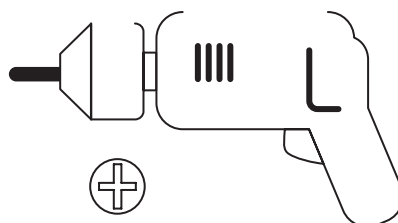

Hand Drill w/Phillips Bit


OR

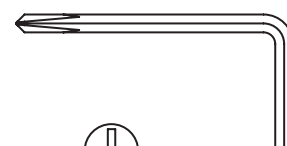


Hex Key w/Phillips Head

Pro Tips – Cam & Bolt Furniture Connectors



This electric fireplace mantel uses cam and bolt connectors for furniture assembly. These make for a quick, simple, and sturdy connection method. Following these simple steps will assure a fast and hassle-free setup.

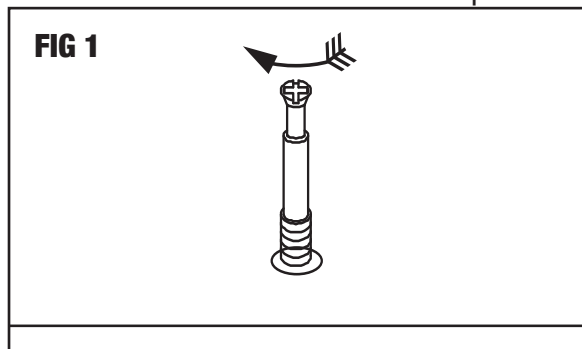

Install U1 bolt into threaded 1/8" holes in the wood panels (FIG 1). Hand tighten only.

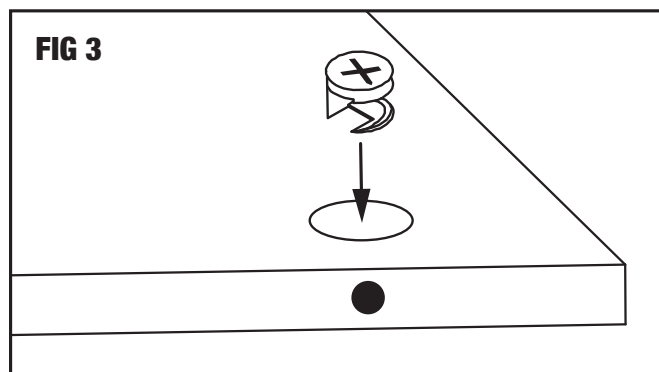


Install the cam into 3/8" holes in the wood panels (FIG 3). Make sure "X" pattern is visible once installed. With Phillips head screwdriver, align the pointed leg of the "X" pattern with the bolt hole on the edge of the panel (FIG 4).

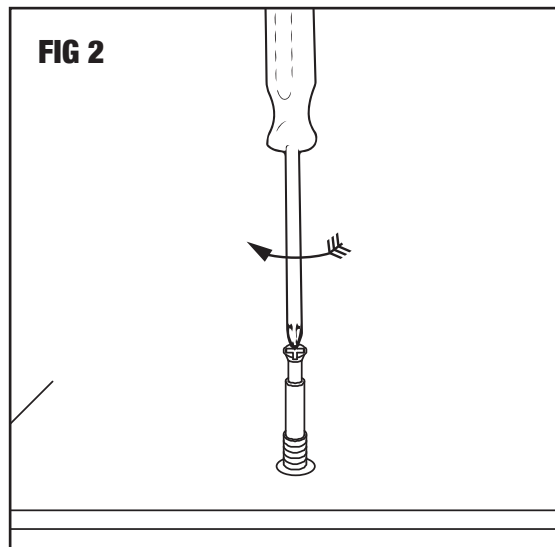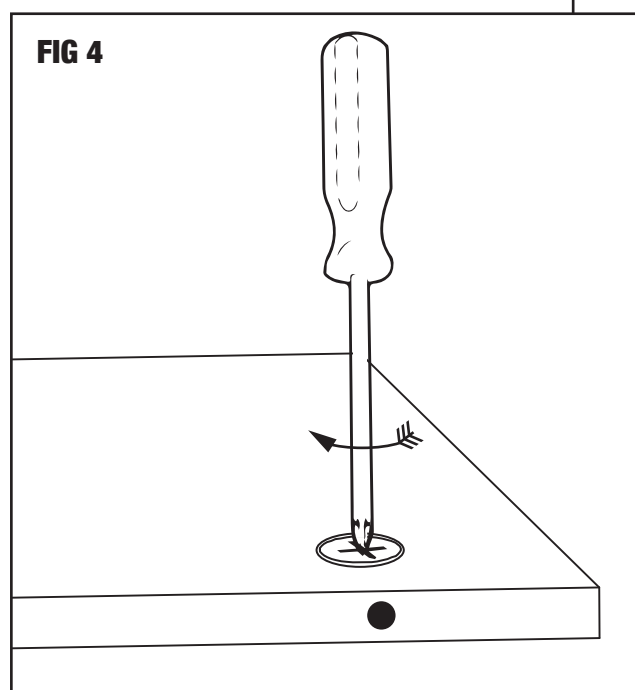


Use a manual Phillips head screwdriver (FIG 2) to fully tighten the bolt up to the shoulder at end of the threaded section.

Align the prepared panel with the bolts and slide panel onto the bolts (FIG 5). Once the panel seats against the perpendicular panel, tighten the cam with the Phillips head screwdriver to complete the connection (FIG 5). The panels will snug-up for a completed connection.

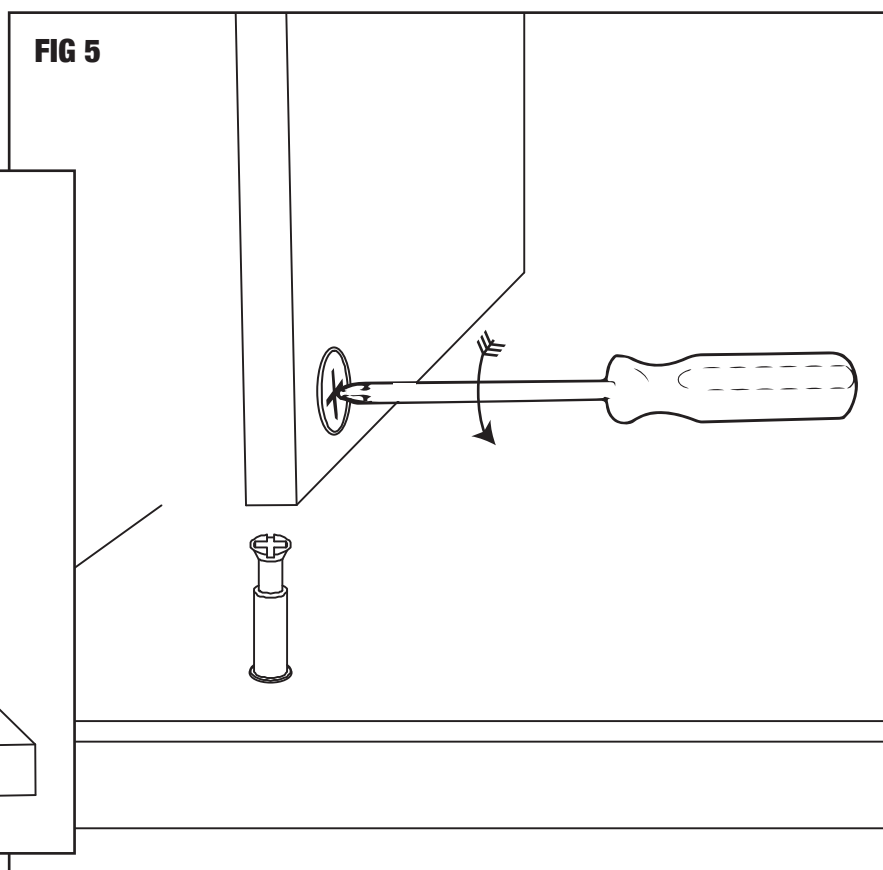


Mantel Assembly

STEP 1

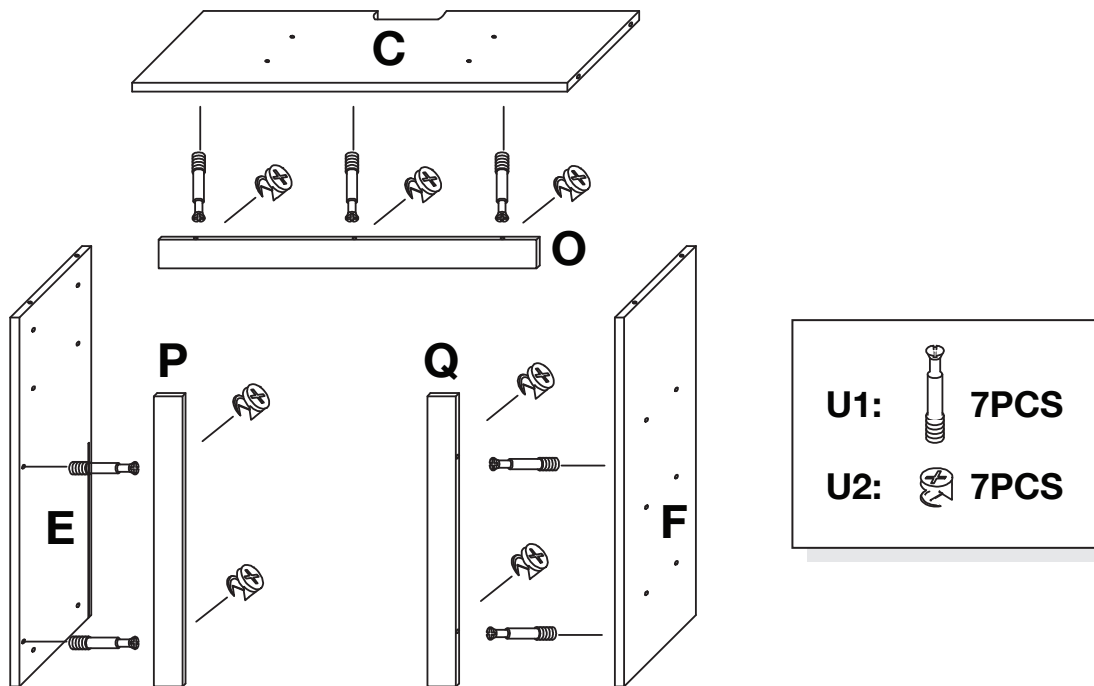

Lay out panels C, E, F and surround trim O, P, and Q. Locate 7 bolts (U1) and 7 cams (U2). Following the pro tips for connector hardware installation on page 7, connect panel C with surround trim O. Repeat for E and P, and then F and Q. Tighten cams until panels fit snug.


STEP 2

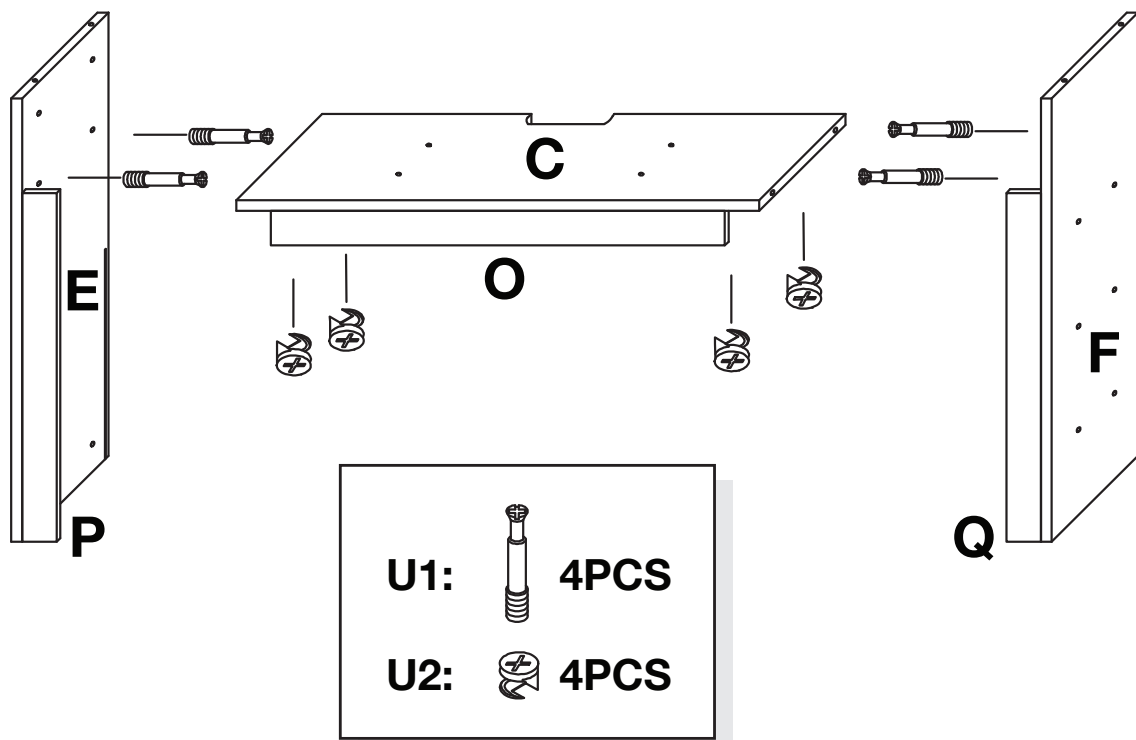

Locate 4 bolts (U1) and 4 cams (U2). Following the pro tips on page 7, connect center shelf C/O with the surround panels E/P and F/Q. Tighten cams until panels fit snug. **Set completed insert surround aside.**

Mantel Assembly

STEP 3

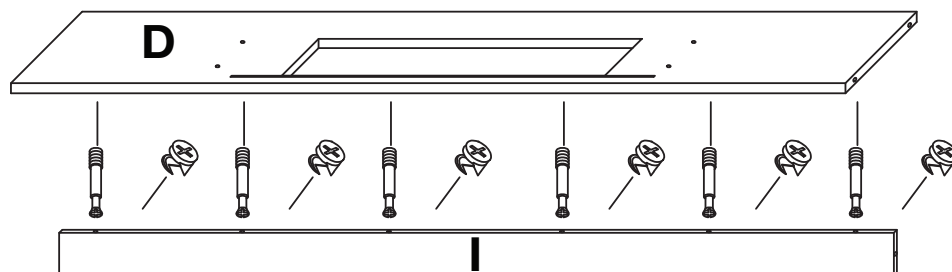


U1: 6PCS

U2: 6PCS

Lay out base panel D and toe kick I. Locate 6 bolts (U1) and 6 cams (U2). Following the pro tips on page 7, connect the toe kick I to the underside of base D. Tighten cams until panels fit snug.

STEP 4

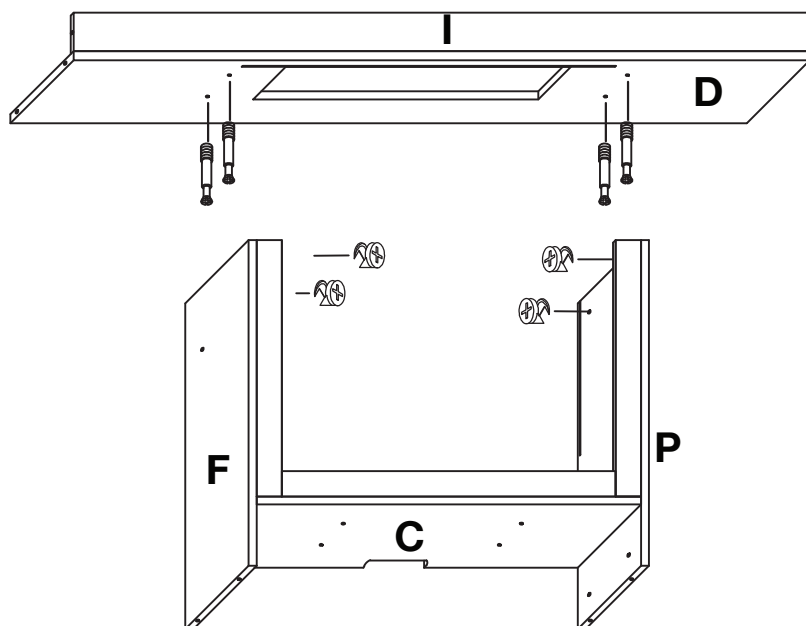


U1: 4 PCS

U2: 4 PCS

Locate the completed insert surround assembly from Step 2 and turn upside down on a flat surface. Locate 4 bolts (U1) and 4 cams (U2). Following the pro tips from page 7, carefully fit the base panel from Step 3 onto the completed surround assembly. Working from one side, make sure the bolts sit into the connection holes. Tighten cams until panels fit snug.


Mantel Assembly

STEP 5

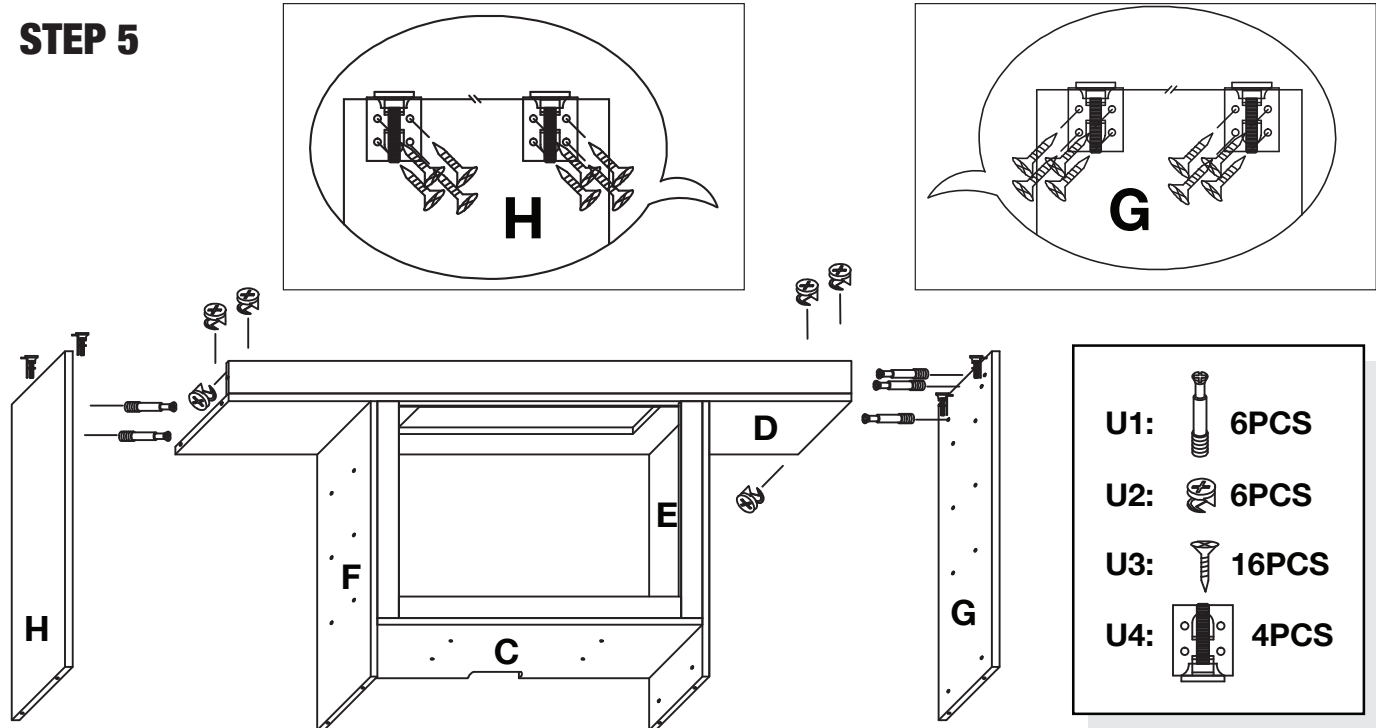

Locate exterior side panels G and H and 4 levelers (U4). Install the floor levelers to the inside surface of side panels G and H with screws (U3). Locate 6 bolts (U1) and 6 cams (U2). Following the pro tips on page 7, connect panels G and H to the completed base assembly (which should still be upside down on a flat surface). Tighten cams until panels fit snug.

STEP 6

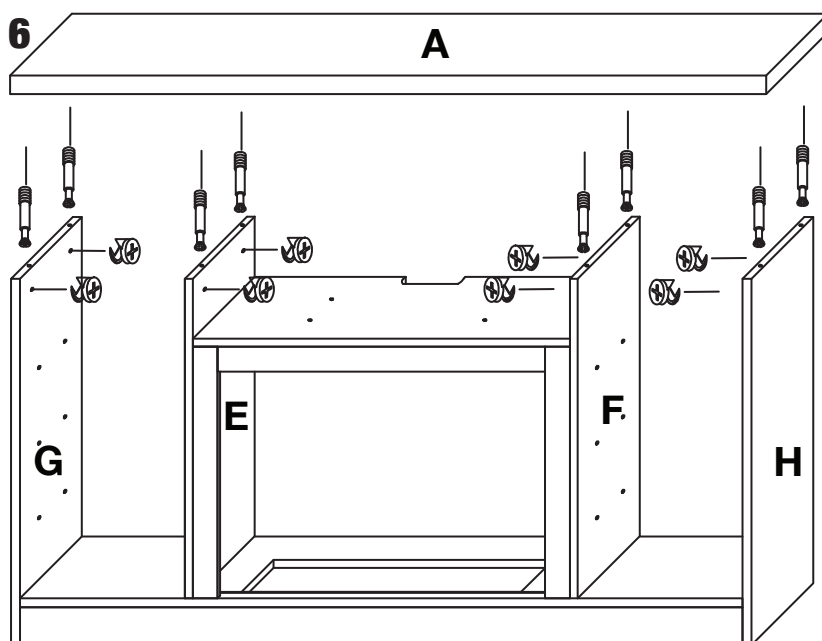


PRO TIP: With the unit partially completed, you can “test fit” and adjust the leveling feet easily to create a perfect fit for the completed fireplace.

With help from an adult, turn the completed base assembly from Step 5 right-side up. Locate the top (A), 8 bolts (U1), and 8 cams (U2). Following the pro tips on page 7, install the bolts (U1) to top (A). Carefully set top (A) onto the completed mantel assembly, and install the cams (U2). Tighten cams until panels fit snug. Set the completed mantel assembly aside.

Insert Preparation


Insert Parts List		
A	Left Front Log	x1
B	Right Front Log	x1
C	Center Left Log	x1
D	Center Right Log	x1
E	Left Rear Log	x1
F	Right Rear Log	x1
G	Ember Bed/Heater	x1

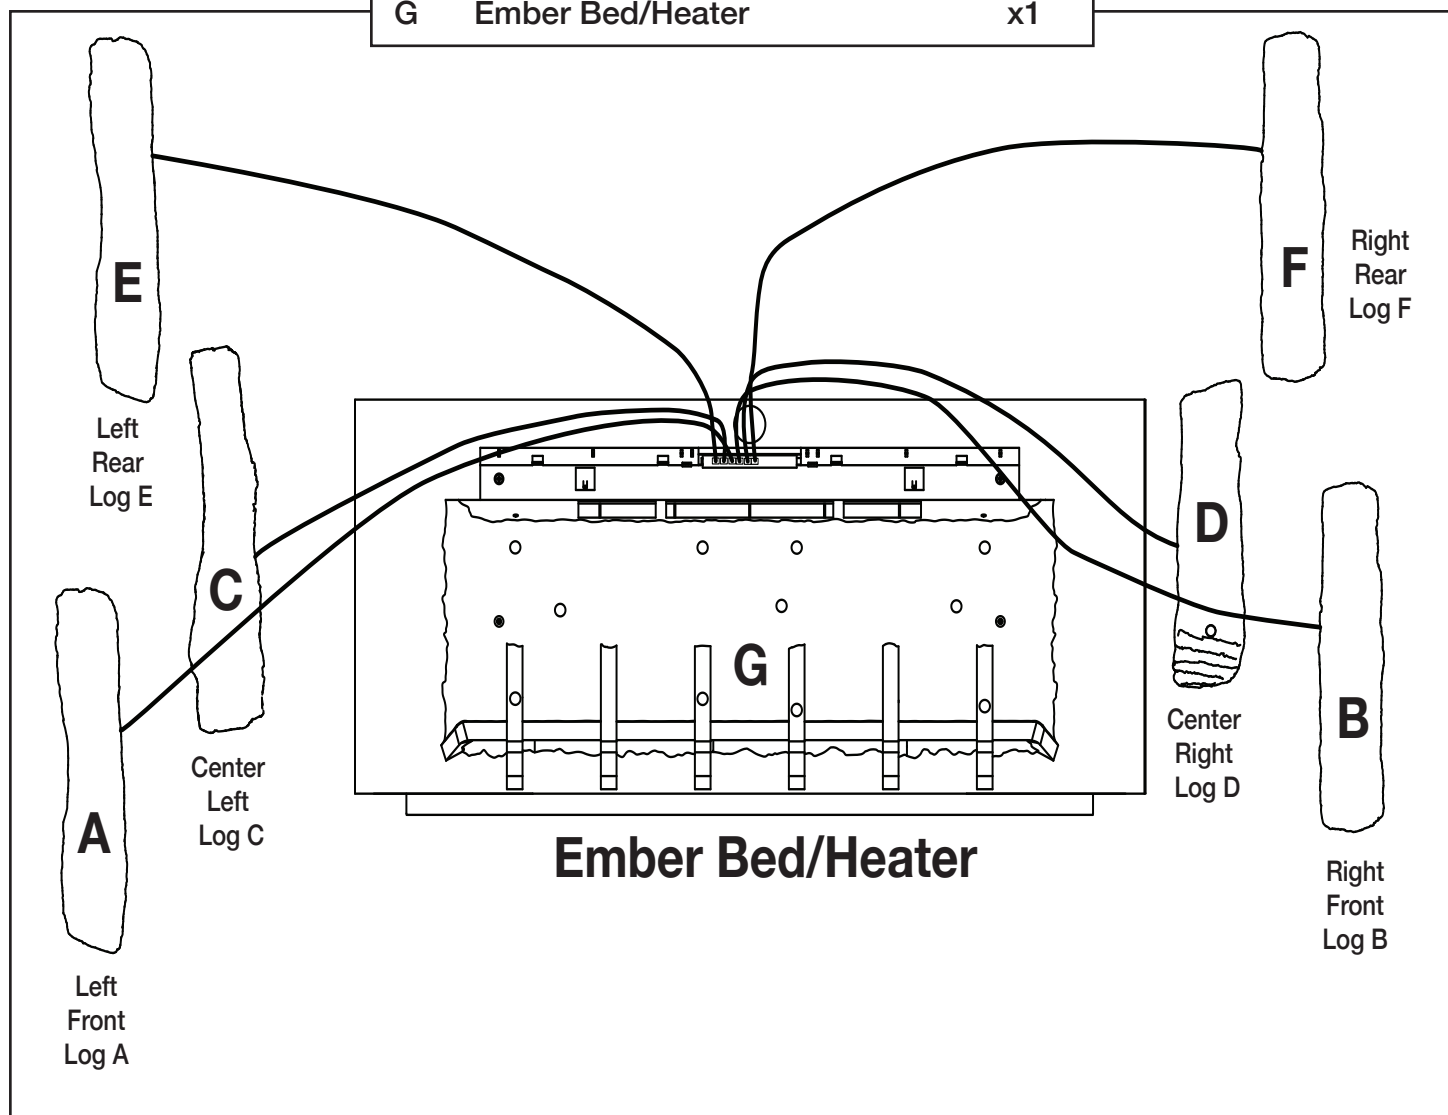


Locate the fireplace insert carton. Open the carton carefully as to not scratch or damage the fireplace insert inside. Slide the insert out of the carton on a flat surface like a table. (Pro tip: Use a moving or heavy blanket to create a soft surface and protect your table.) All the logs are connected to the ember bed/heater with low voltage power wires and labeled A-F according to final assembled position. Lay out logs carefully without disconnecting the power wires to the logs.

Insert Assembly

STEP 7

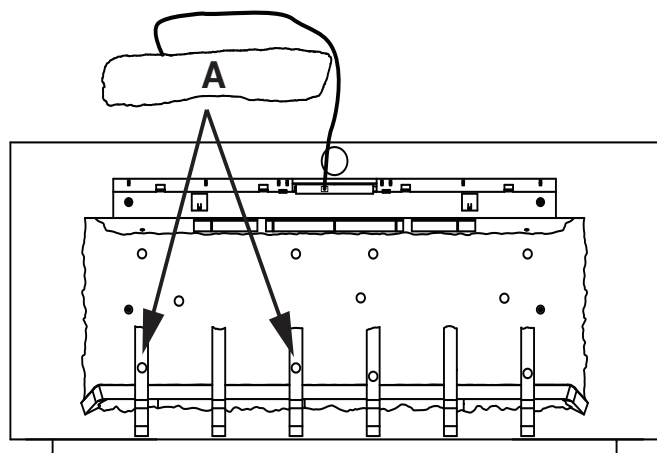


TOP VIEW

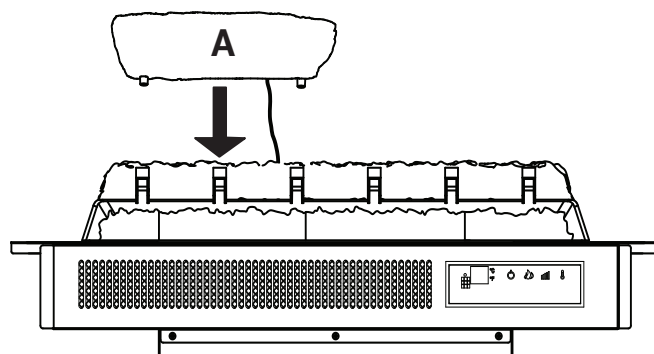


FRONT VIEW

Install Log A into the correct position at the front left side of the ember bed. Insert the two posts on bottom of the log into the two mounting ports in the ember bed. Carefully route the power wires as shown in Step 8 illustration below.

STEP 8

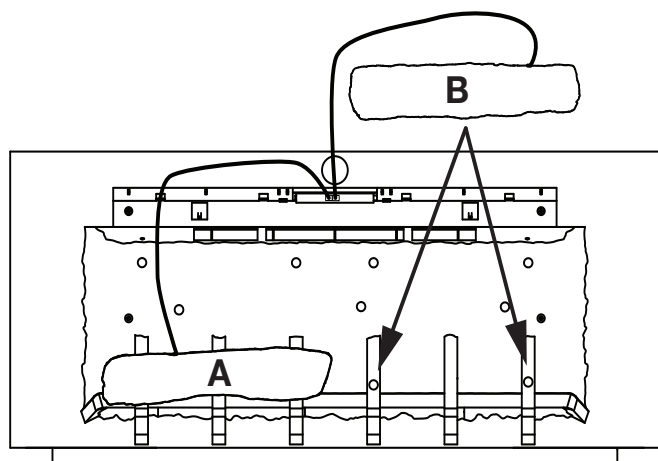

TOP VIEW

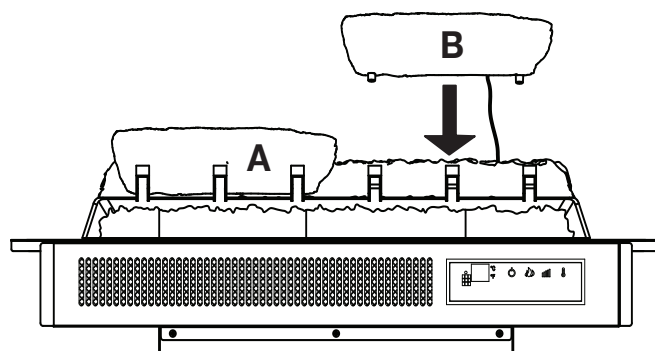


FRONT VIEW

Install Log B into the correct position at the front right side of the ember bed. Insert the two posts on bottom of log into the two mounting ports in the ember bed. Carefully route the power wires as shown in Step 9 illustration.


Insert Assembly

STEP 9

LOG D IS INSTALLED BEFORE LOG C

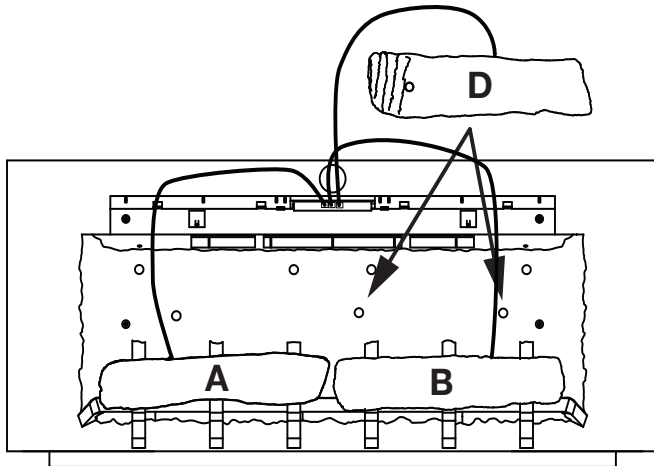


TOP VIEW

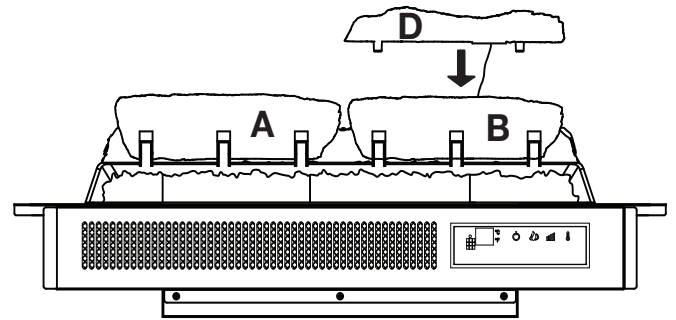


FRONT VIEW

Install Log D into the correct position in center row right side of the ember bed. Insert the two posts on bottom of log into the two mounting ports in the ember bed. Carefully route the power wires as shown in Step 10 illustration below.

STEP 10

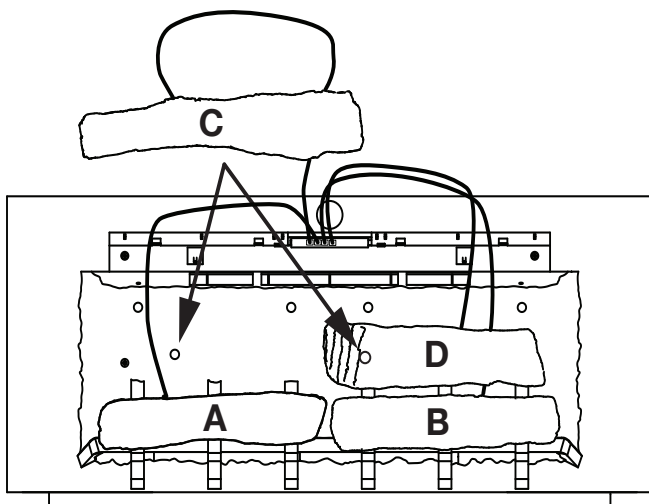

TOP VIEW

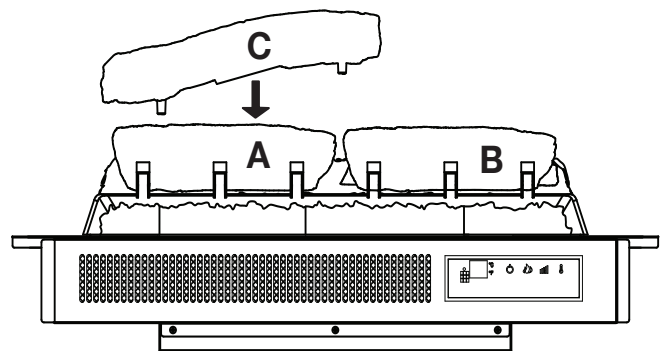


FRONT VIEW


Install Log C into the correct position in center row left side of the ember bed. Insert the left post into the mounting port in the ember bed and the right post into the mounting port in Log D. Carefully route the power wires as shown in Step 11 illustration.

Insert Assembly

STEP 11

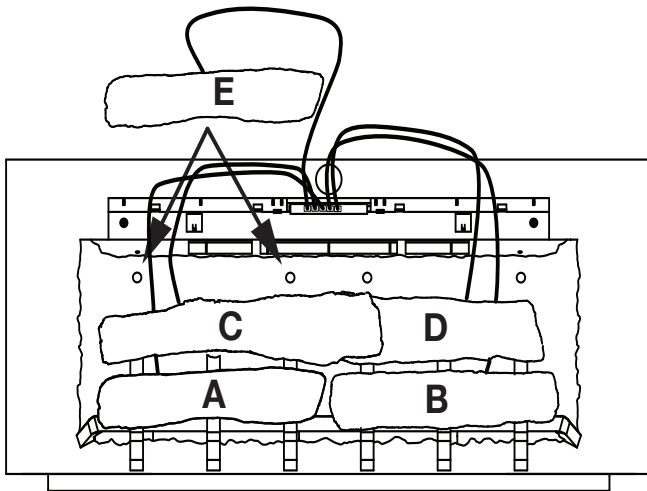


TOP VIEW

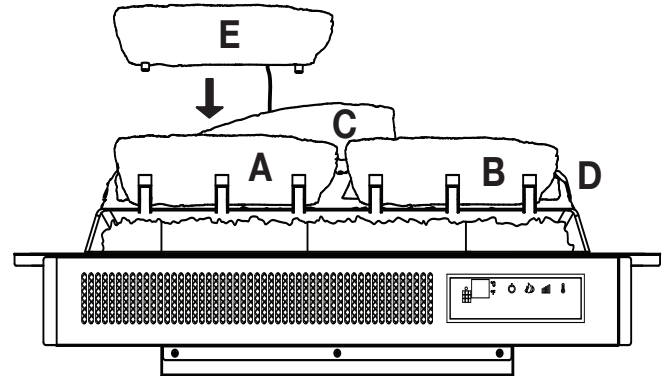


FRONT VIEW

Install Log E into the correct position at the back left side of the ember bed. Insert the two posts on bottom of log into the two mounting ports in the ember bed. Carefully route the power wires as shown in Step 12 illustration below.

STEP 12

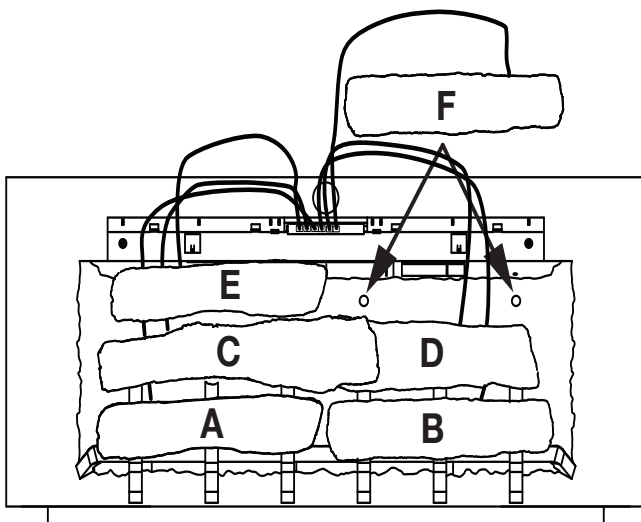

TOP VIEW

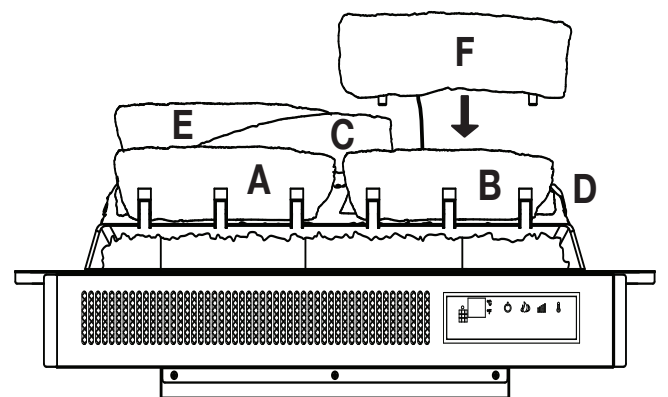


FRONT VIEW


Install Log F into the correct position at the back right side of the ember bed. Insert the two posts on bottom of log into the two mounting ports in the ember bed. Carefully route the power wires as shown in Step 13 illustration.

Insert Assembly

STEP 13

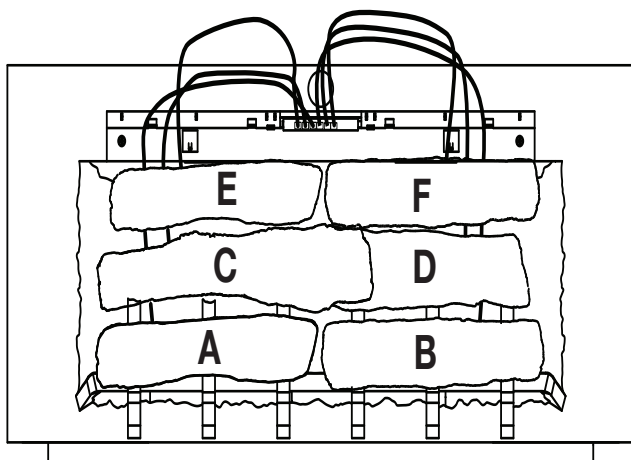



TOP VIEW

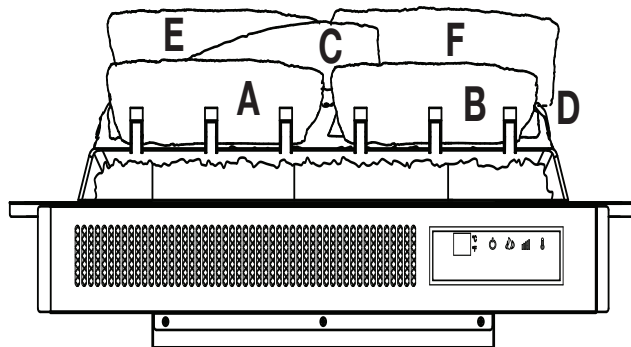

FRONT VIEW

The completed Electric Fireplace Insert is now ready for installation into the decorative mantel. Please follow steps 14-21 to complete your Media Electric Fireplace. **Logs can easily be removed if you make a mistake in the order or position of installation.**


STEP 14

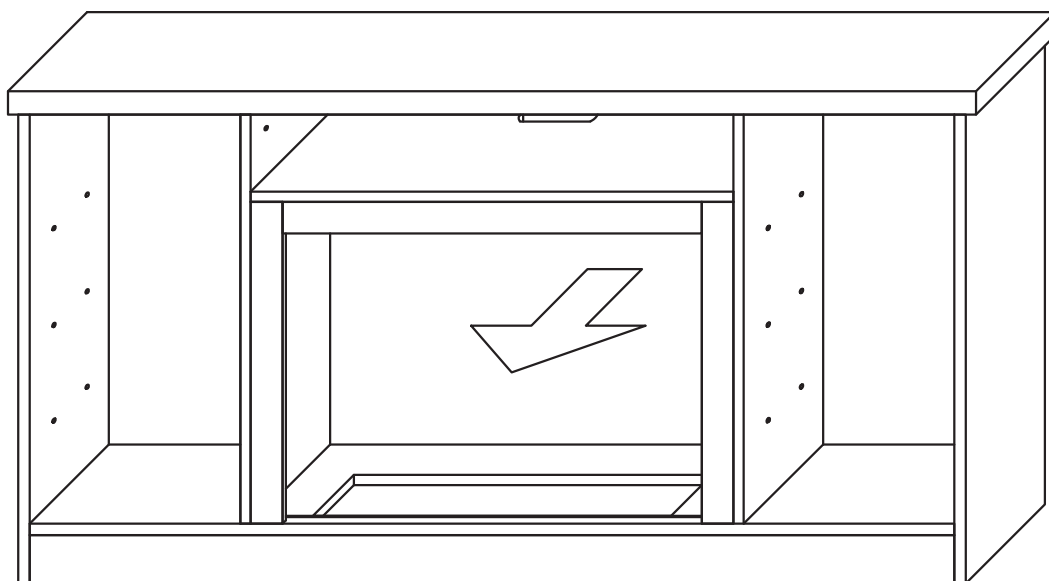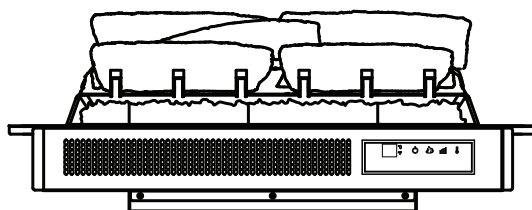

From the back side of the mantel assembly, carefully slide the completed electric fireplace insert into the mantel. The heater will drop into the cavity in the base panel, which puts the insert into the proper position to complete the fireplace. Handle the insert carefully, making sure that the log wires are not pinched during installation. Make sure the power cord is free of obstruction from the back of the insert.

Electric Fireplace Assembly


STEP 15

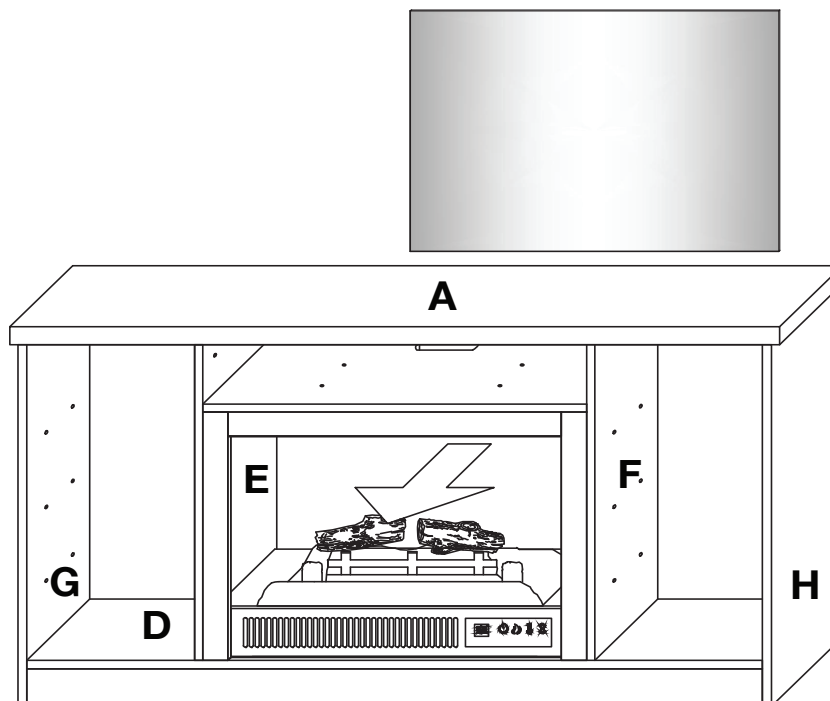

Locate part S, the front glass (you can clean the glass prior to installation). From the back of the media console, carefully slide the front glass into the insert cavity over the insert. Slowly lower the glass onto the front edge of the insert and tilt up to fill the front opening of the mantel.


STEP 16

BACK VIEW

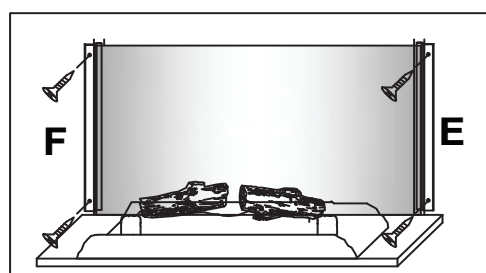

U5:  2PCS

U6:  4PCS

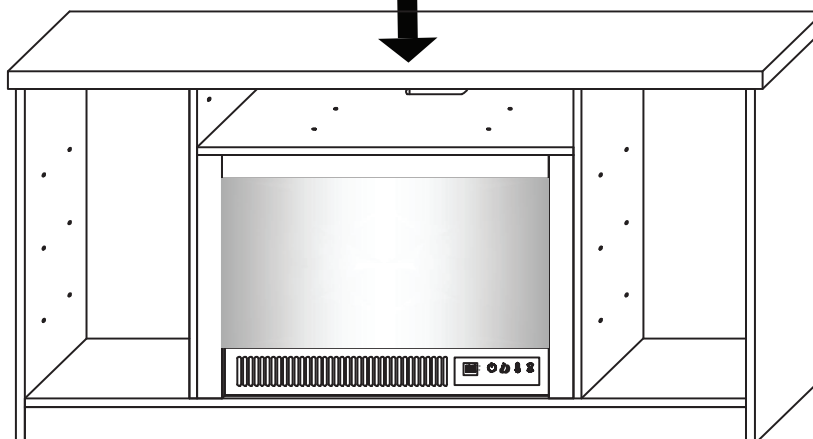

Locate the glass mounting brackets (U5) and 4 screws (U6). Holding the glass into place against the back side of the front surround trim panels, carefully insert the screws and twist by hand. Finish tightening the screws with a manual Phillips head screwdriver.

Electric Fireplace Assembly

STEP 17


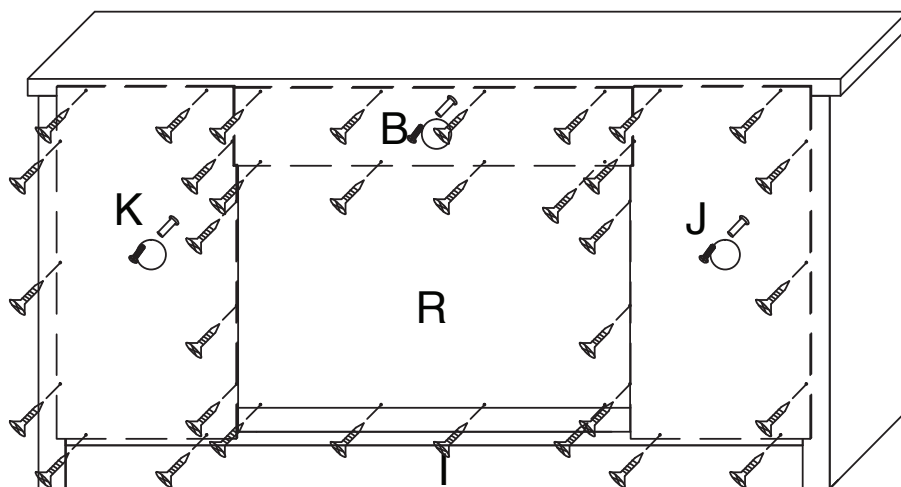




Fig.J

BACK

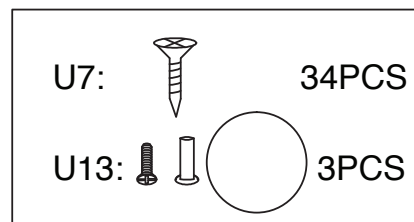

Locate back panels (B, K, R, J) and 34 mounting screws (U7). Using (U13) white bolts, secure wire management covers over pass through holes. The covers should be mounted so they are on the back side of the back panels. Secure panel K in place with the mounting screws that are evenly spaced around the panel. You can leave the screws a little loose. Repeat for panels B, R, and J. Once the panels are positioned correctly, tighten all screws with a power drill. Note: Back panels are key to the stability of the furniture, so carefully pay attention to the installation of these parts.

STEP 18

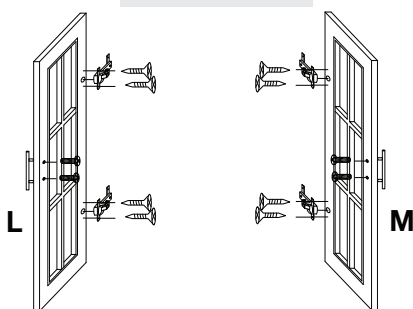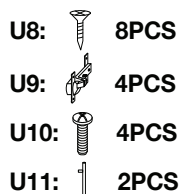

STEP 19

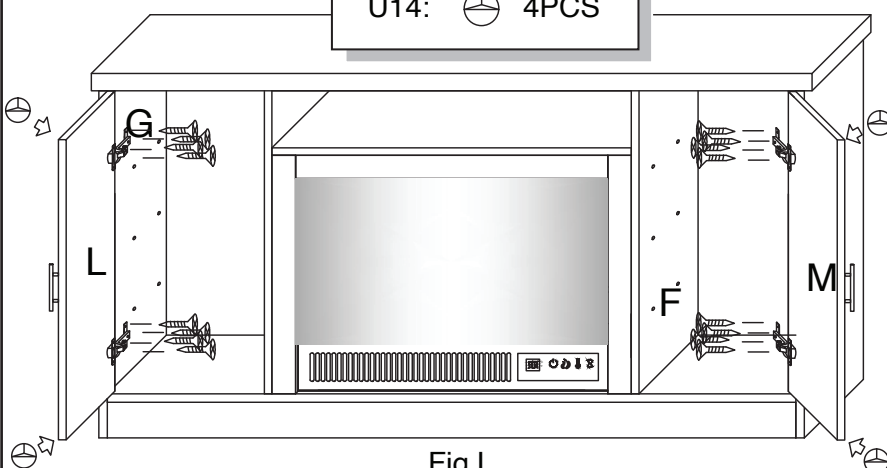



Fig.L

Locate the 2 doors (L, M), hinges (U9), and mounting screws (U8). Using the screws, mount the hinges to the back of the doors using the provided pilot holes. Locate the 2 door pulls (U11) and bolts (U10). Attach the handles to the front of the doors through the mounting holes provided. Tighten with a Phillips head screwdriver.


Locate two completed doors (L, M) and hinge mounting screws (U8). With a Phillips head screwdriver using pilot holes in side panels, mount the two doors to the completed fireplace case. Finish tightening the screws with a manual Phillips head screwdriver. If the doors do not close correctly, you can adjust hinges as noted in Pro Tips - Hinge/Door Adjustment on page 18. Add corner caps (U14) on each door corner.

Pro Tips – Hinge/Door Adjustment

DOOR HEIGHT ADJUSTMENT

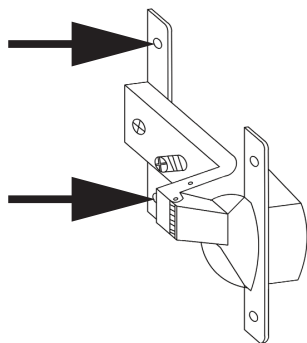


Loosen hinge mounting screws for both hinges, adjust door, and re-tighten the mounting screws.

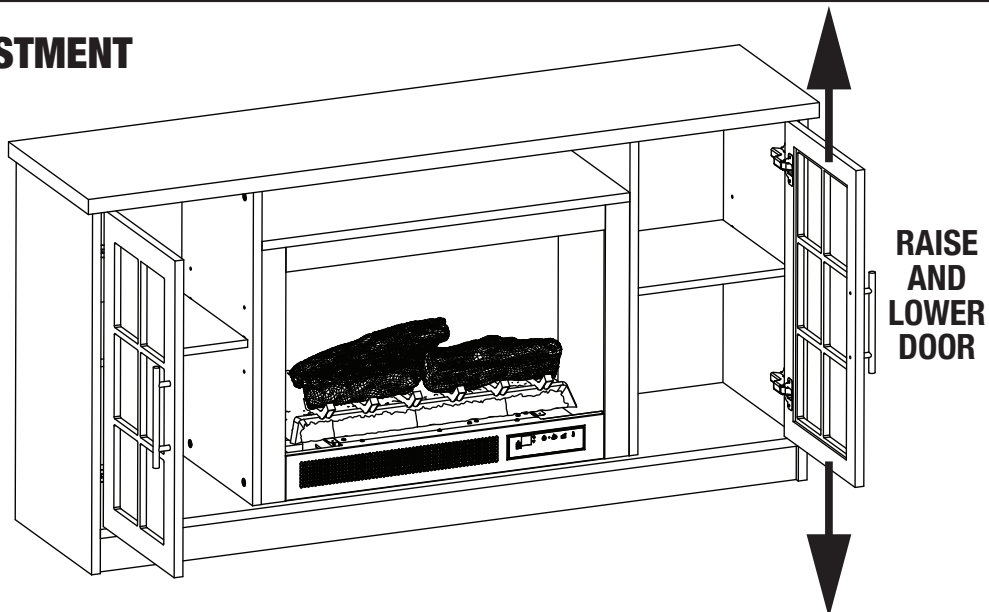


RAISE
AND
LOWER
DOOR

DOOR LEFT OR RIGHT ADJUSTMENT

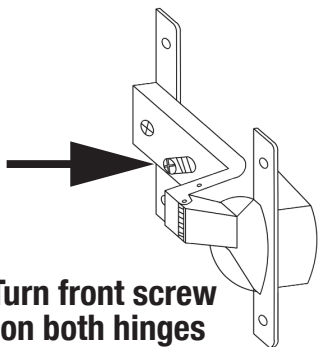


Turn front screw on both hinges to adjust closed door position to left or right.

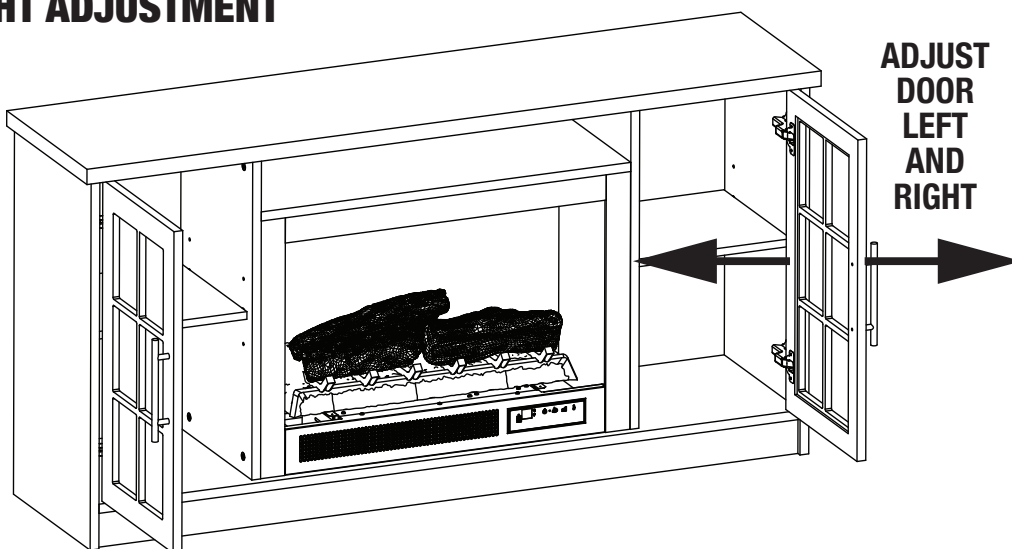


ADJUST
DOOR
LEFT
AND
RIGHT

DOOR IN AND OUT ADJUSTMENT

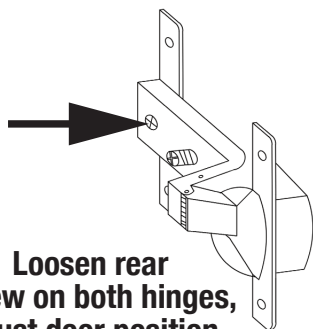


Loosen rear screw on both hinges, adjust door position, and re-tighten the screws.

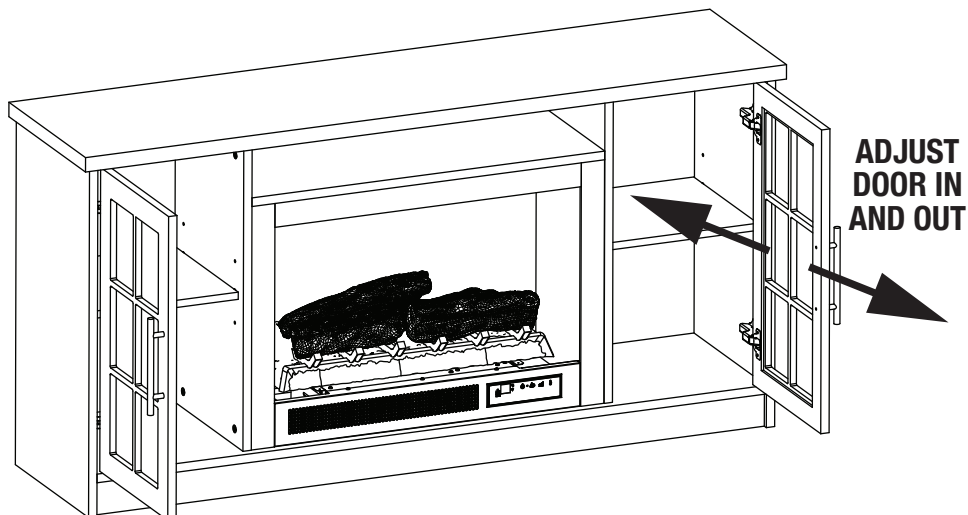

ADJUST
DOOR
IN
AND
OUT

Electric Fireplace Assembly


STEP 20

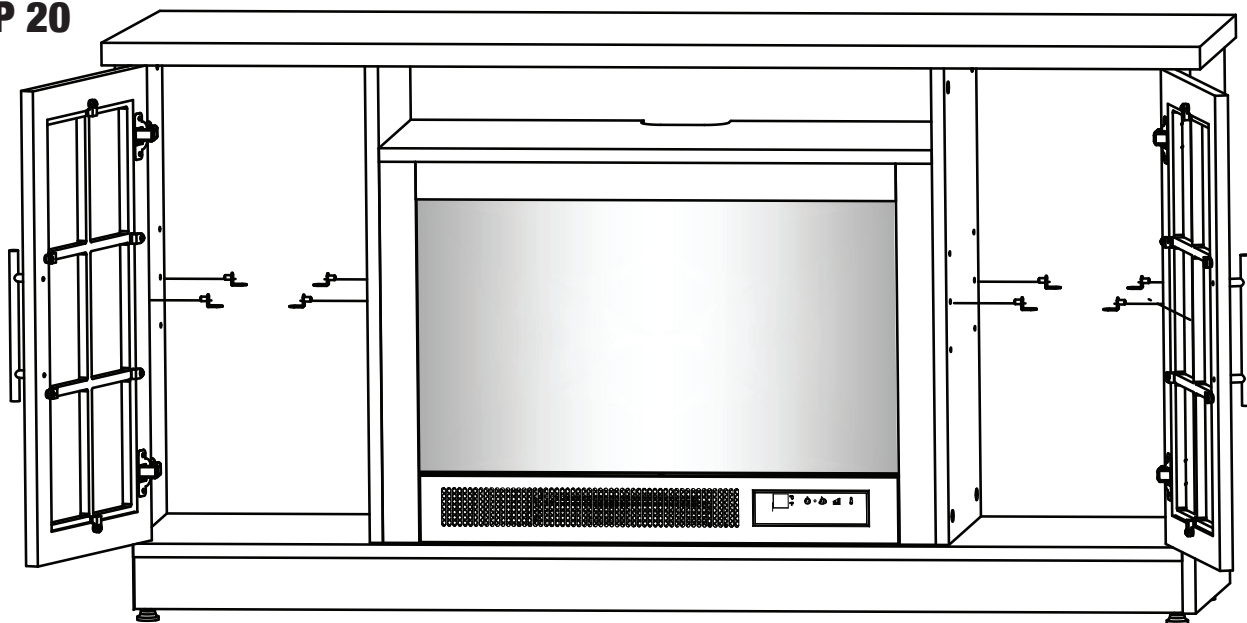

U12:  8PCS

Locate the 8 shelf pins (U12). Install 2 on each of the 4 interior vertical panels. Make sure the pins are mounted in the same row. Mount so that the shelf will sit on the shelf pin and lock the shelf pin into the mounting hole. Adjust to fit your storage needs.

STEP 21

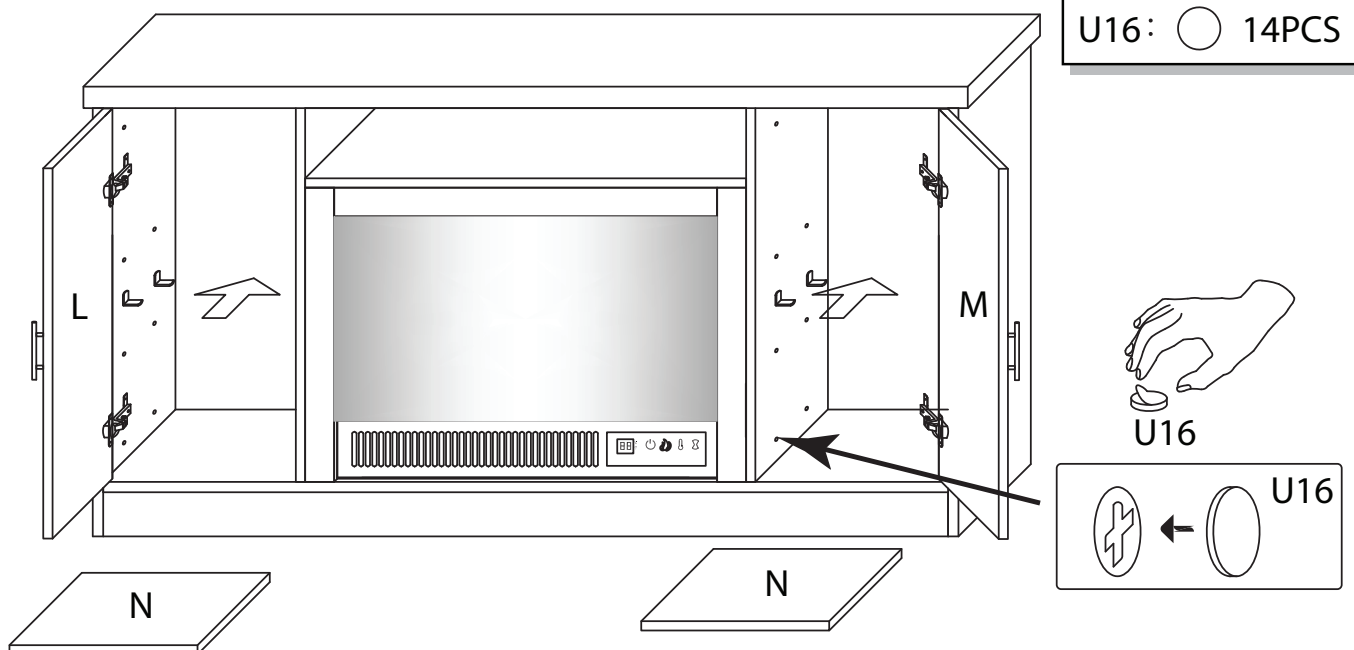


Locate the 2 storage shelves (N). Install the 2 shelves onto the shelf pins installed in Step 20.

Optional (White Unit ONLY): use white stickers (U16) to cover exposed cams on inside of side panel G and H.

Electric Fireplace Assembly

STEP 22

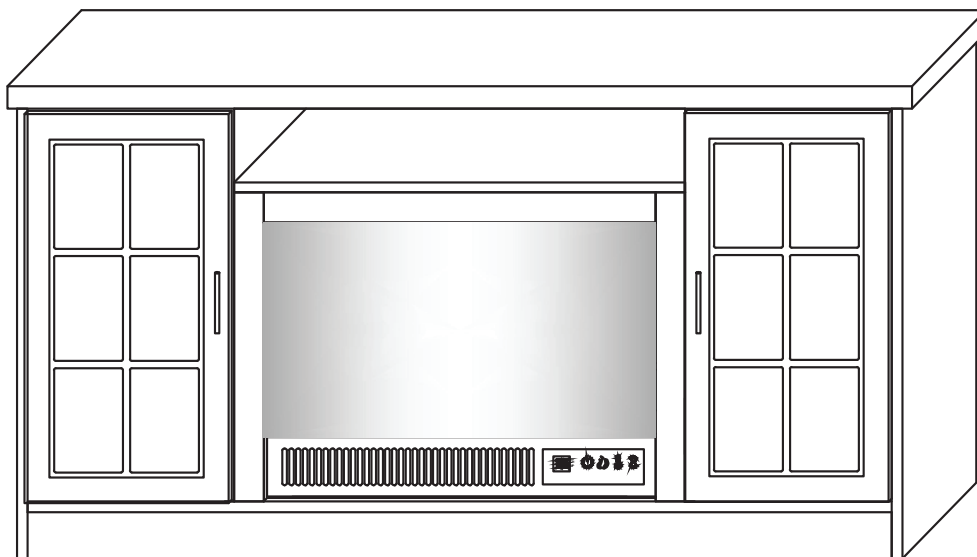

Your electric fireplace is now complete. Carefully move the unit to its permanent place in your home. Make sure to get help lifting the completed unit as it can be very heavy. Once you have it in position, you can adjust the leveling feet on the base to make sure the unit sits level on the floor. The levelers adjust simply by hand: turning to the right raises the floor pad and turning to the left lowers the floor pad. **Plug the electric fireplace directly into a wall outlet and enjoy your new electric fireplace. Please follow all warning and operating instructions.**

WALL ANCHOR SAFETY CABLE

The use of wall anchor safety cable is highly recommended in order to reduce the risk of the fireplace being tipped over accidentally.

WARNING: This cable may reduce possible risk of injury if the fireplace is improperly handled, but is not a substitute for proper adult supervision. Children should not be left unattended near any heater.

1. Drill a 5/16 in (8mm) hole in the wall.
2. Insert the plastic wall anchor (TR1) into the hole and gently tap until the flange on the anchor is against the wall surface.
3. Position the back edge of the mantel close to the wall.
4. Attach the safety cable (TR4) to the mantel using the furniture anchor screw (TR3) and one washer (TR5).
5. Using the wall anchor screw (TR2) and one washer (TR5), attach the other end of safety cable to the wall.
6. Make sure all screws are tight.

TR1



Wall Anchor

TR2



Wall Anchor Screw

TR3



Furniture Anchor Screw

TR4



Safety Cable


TR5



Washers

Electric Fireplace Assembly

WALL ANCHOR SAFETY CABLE

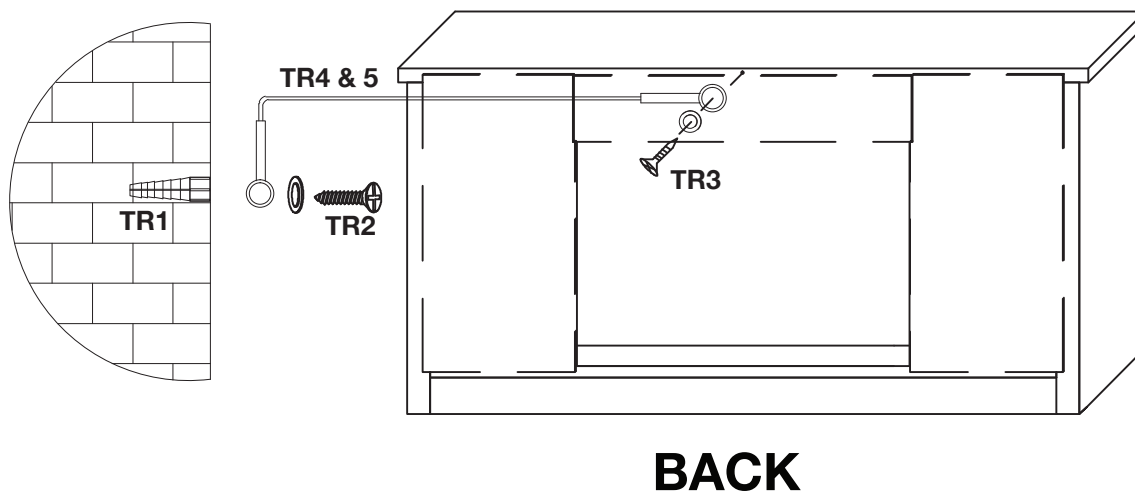


BACK

Operating Instructions – Control Panel


Once the electric heater has been properly installed and connected to a ground electrical outlet, it is ready to operate.

Note: Ensure the circuit breakers for the power supply are turned on.

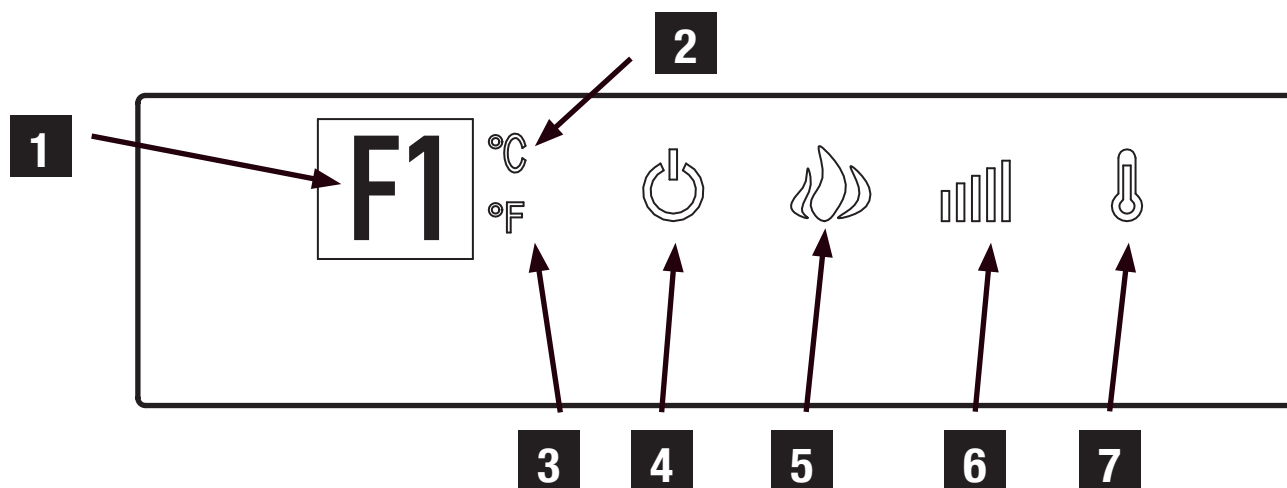

1. **Display screen** - Displays current status values. If not operated for more than 5 seconds, the screen will automatically turn off.
2. **Celsius temperature symbol indicator light** - When this indicator light is on, it indicates the temperature is in Celsius.
3. **Fahrenheit temperature symbol indicator light** - When this indicator light is on, it indicates the temperature is in Fahrenheit.
4. **Power** – Turns the appliance on / off.
5. **Flame color** – Press this button to select from the three flame effect options.
6. **Flame brightness** - Press this button to change the flame brightness. Press again to decrease the flame brightness. There are 5 light brightness options. The flame brightness will go dimmer under the sequence of F5, F4, F3, F2 and F1. Press the button again to stop the flame effect.
7. **Temperature** – Press this button to adjust the temperature. The temperature can be adjusted within the range of 5-37°C or 41-99°F.

Operating Instructions – Remote Control

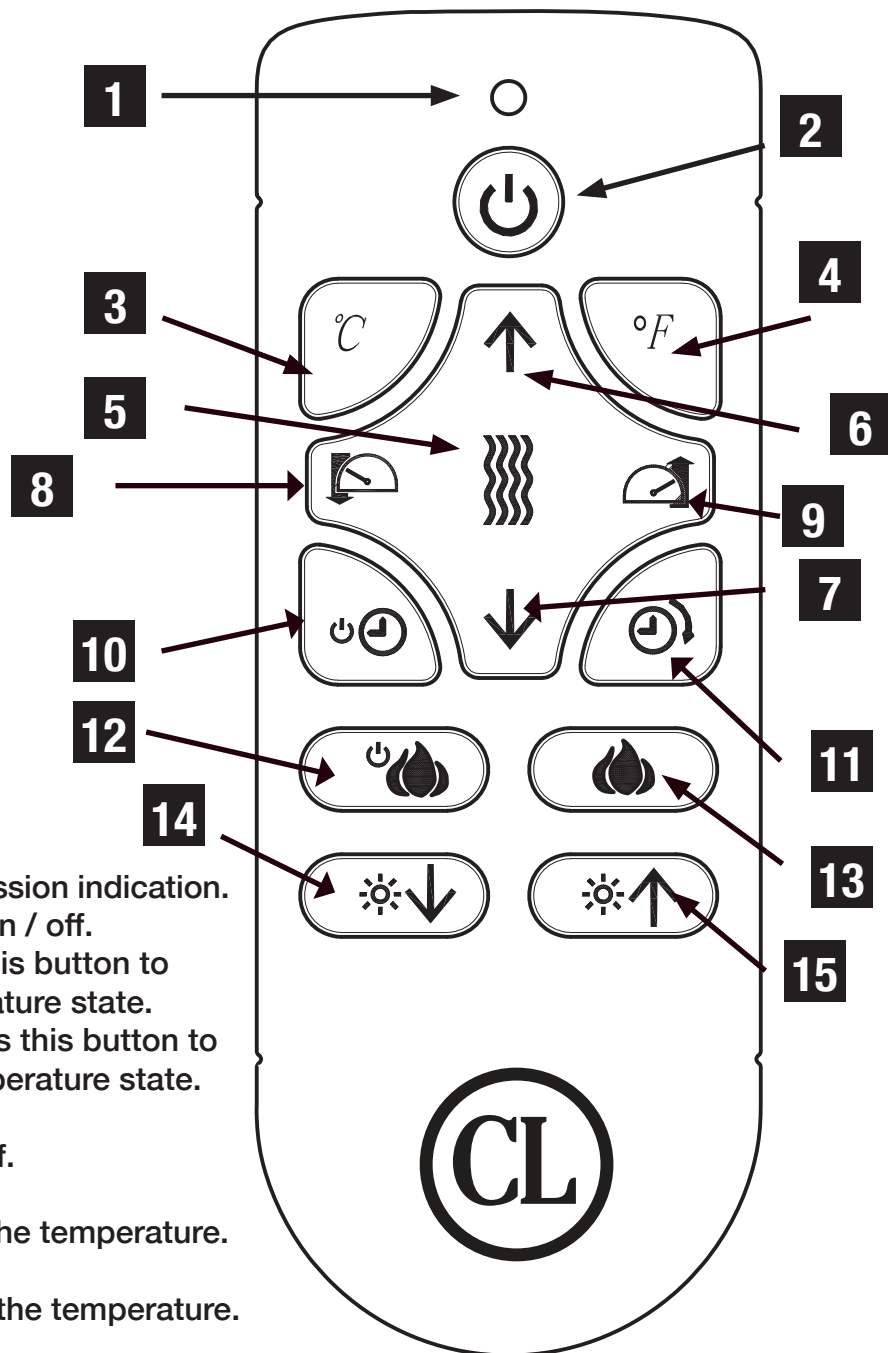

1. Indicator light - Signal transmission indication.
2. Power – Turns the appliance on / off.
3. Celsius temperature - Press this button to change to the Celsius temperature state.
4. Fahrenheit temperature - Press this button to change to the Fahrenheit temperature state.
5. Heat on/off - Turns the heat function on / off.
6. Temperature increase - Press this button to increase the temperature.
7. Temperature decrease - Press this button to decrease the temperature.
8. Decrease flame speed - Press this button to decrease the flame speed. There are 5 speed options for your selection (5-4-3-2-1).
9. Increase flame speed - Press this button to increase the flame speed (1-2-3-4-5).
10. Timer off - Press this button to turn off the timer function.
11. Timer on and adjustment - Press this button to turn on the timer function. Press again to select timing. There are 10 timing options (30min-1H-2H-3H-4H-5H-6H-7H-8H-9H).
12. Flame effect on/off – Press this button to turn on/off the flame effect.
13. Flame color – Press this button to change between three flame effect options.
14. Flame brightness decrease - Press this button to decrease the flame brightness.
15. Flame brightness increase - Press this button to increase the flame brightness.

Press the button again to

Electric Fireplace MUST READ

Maintenance:

WARNING: Completely disconnect power before attempting any maintenance or cleaning to reduce the risk of fire or electric shock. Maintenance should only be performed by a certified technician.

Cleaning: Before cleaning any parts of the fireplace, make sure to first turn off the controls and then unplug the unit from power source. **Wait until the unit has completely cooled before attempting any cleaning.**


Cleaning Glass Panel: Remove dust with clean, dry cloth. Remove fingerprints and other marks from glass door by using a clean, damp cloth. Do not use abrasive cleaners or spray liquids on glass door surfaces.

Metal and Metal Painted Parts: Clean with a clean, damp cloth only. Do not use abrasive cleaners or spray liquids on these surfaces.

Electrical Connections:

This heater is for use on 120 volts. The cord has a plug as shown at A in figure below. An adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box.

The adapter should not be used if a three-slot grounded receptacle is available.

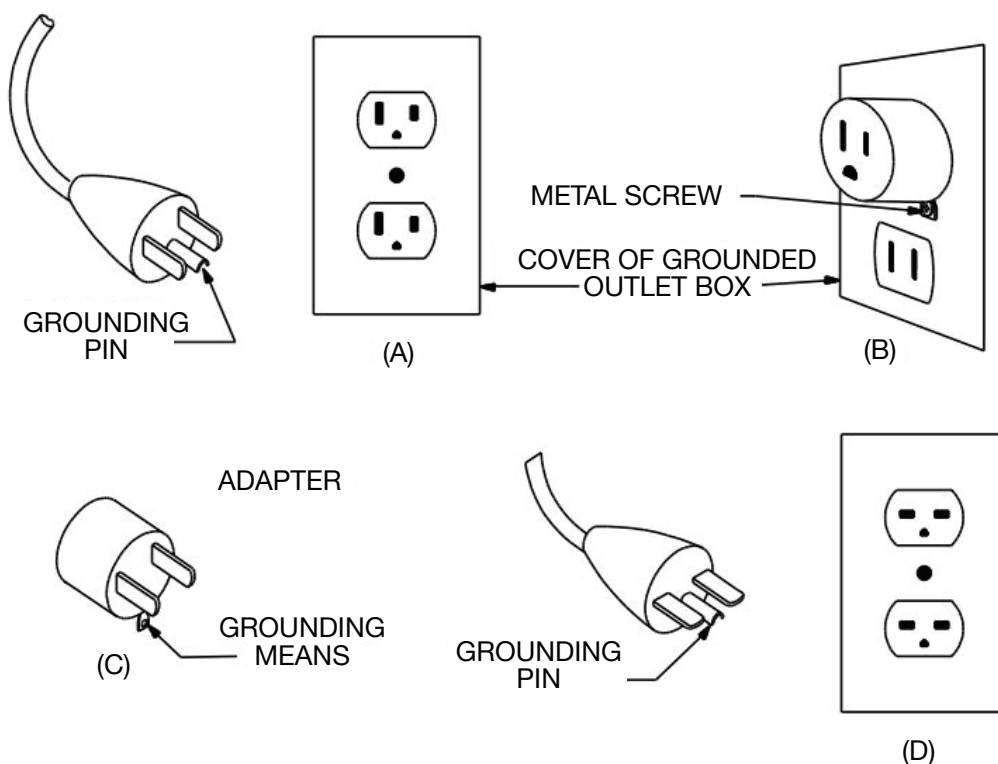

CountryLivingTM

Item # CL-7217-M-WHT-26
CL-M-7217-TT (NDF-26KD)
DALTON MEDIA ELECTRIC FIREPLACE

QUESTIONS, PROBLEMS, MISSING PARTS? BEFORE RETURNING TO THE STORE,
CALL CUSTOMER SERVICE

8am-5pm CST, Monday - Friday,
877-430-0703

Email: resolutions@electricfireplacesdirect.com