


CountryLiving™

Infrared Heater

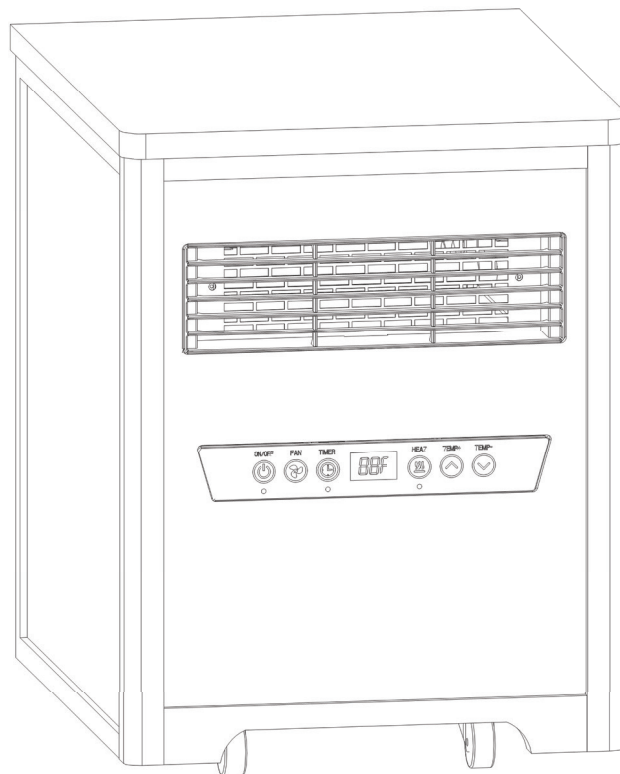

Model: ☐ CL-DRFT-IFH ☐ CL-BIR-IFH

OWNER'S MANUAL

AC 120V 60Hz 1500W


Important Safety Instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. **Read all instructions before using this heater.**
2. **USE THIS HEATER ONLY AS DESCRIBED IN THIS MANUAL.** Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
3. **CAUTION!** This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet from the front of the heater and keep them away from the sides and rear.
4. **EXTREME CAUTION** is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. To disconnect heater, turn control to off, and then remove plug from outlet.
6. **ALWAYS** unplug heater when not in use.
7. **DO NOT** operate any heater if any of the following conditions are true:
 - a. Heater has a damaged cord or plug,
 - b. Heater has malfunctions,
 - c. Heater has been dropped or damaged in any manner.If any of the above are true, discard heater, or return to authorized service facility for examination and/or repair.
8. **DO NOT** use outdoors.
9. This heater is **NOT INTENDED** for use in bathrooms, laundry areas and similar indoor locations. **NEVER** locate heater where it may fall into a bathtub or other water container.
10. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. Connect to properly grounded outlets only.
12. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
13. To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
14. A heater has hot and arcing or sparking parts inside. **DO NOT** use it in areas where gasoline, paint, or flammable liquids are used or stored.
15. **ALWAYS** plug heater directly into a wall outlet/receptacle. **NEVER** use with an extension cord or relocatable power source (outlet/power strip).
16. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
17. To avoid excessive room temperatures which can cause hyperthermia:
DO NOT leave product running unattended in a confined space around infants or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Product Specifications

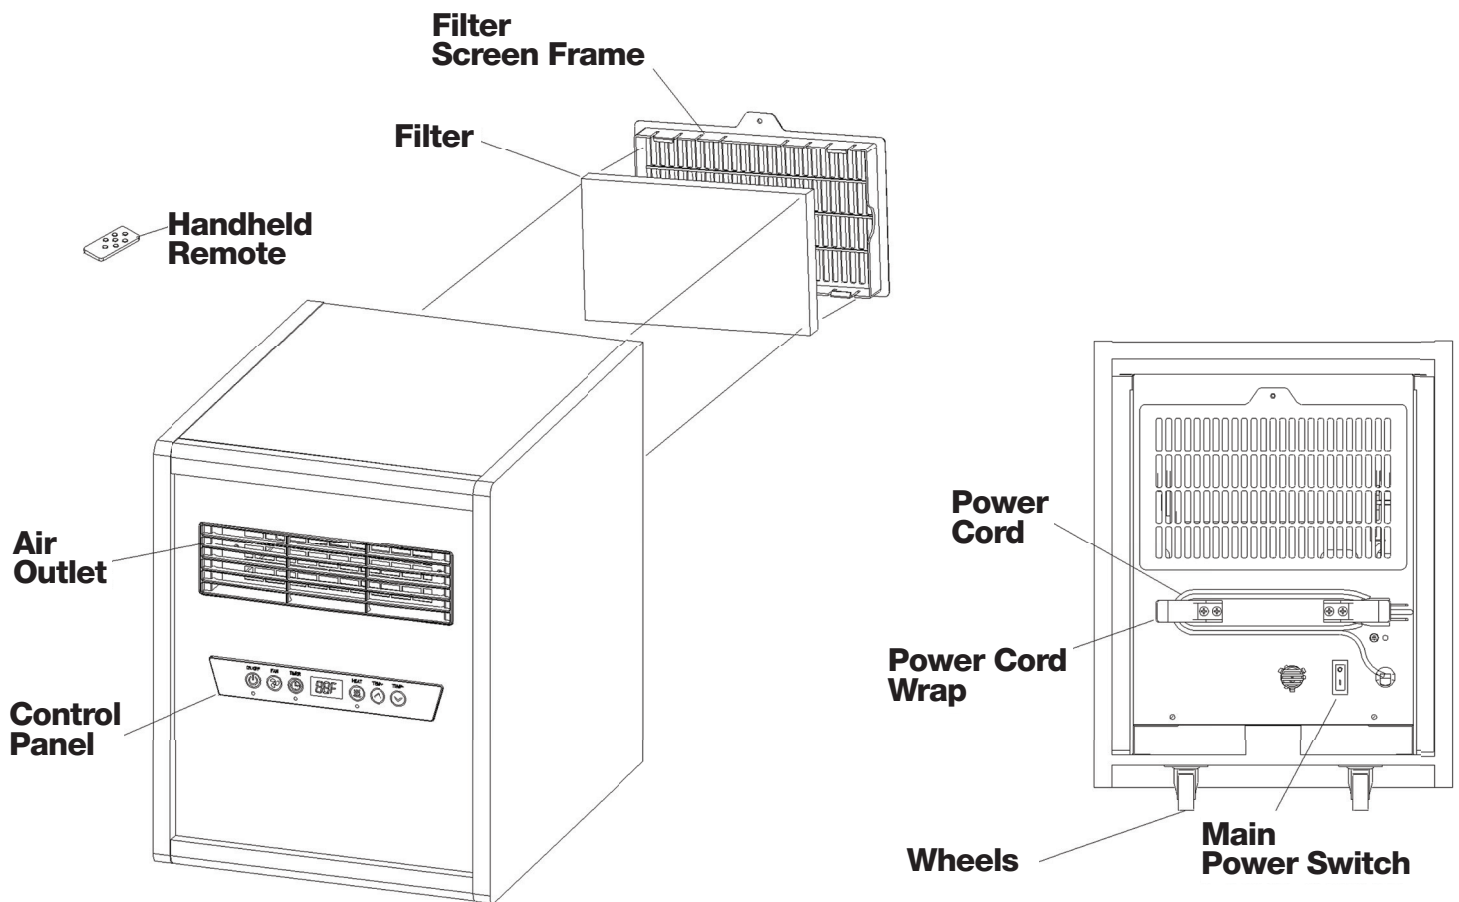

MODEL	CL-DRFT-IFH, CL-BIR-IFH
DESCRIPTION	Infrared Heater
RATING POWER	AC100-120V, 50/60Hz

POWER	1500W
AIR SANITIZING COVERAGE	160 sq. ft.
PRODUCT SIZE	12.87"L x 15.75"W x 15.75"H (327 x 400 x 400 mm)

Features

INFRARED HEATING ELEMENT	Provides heat in two heat settings - 1,000 watts and 1,500 watts
2 SPEED FAN	For maximum control of 110CFM fan to heat the area.
CONTROL PANEL	Heating, Fan Operation Modes, Timer, and Temperature Settings.
HANDHELD REMOTE CONTROL	Remote Control of Heating, Fan Operation Modes, Timer, and Temperature Settings.

Operation



THERE IS A MEMORY FEATURE WHICH WILL KEEP THE PREVIOUS SETTINGS WHEN THE PRODUCT IS TURNED ON AGAIN.

MAIN POWER SWITCH 	The Main Power Switch is located on the back of the heater near the power cord. When the Main Power Switch is turned on, there will be a prompt sound, and the red light under the ON/OFF button will be on, indicating there is power to the control panel.
ON / OFF BUTTON 	Press the ON/OFF button to switch on the heater; press again to shut off the heater.
FAN BUTTON 	Press FAN button three times or press the FAN button on the remote and the display shows F1 (low fan speed). Press the FAN button a fourth time or press the FAN button on the remote a second time and the display shows F2 (high fan speed). Press FAN button a fifth time or press the FAN button on the remote a third time to shut off the fan.
TIMER BUTTON 	Press the TIMER button once for each hour increment between 1 and 12 hours. The display will show the hour(s) selected. An amber LED light will indicate that the timer function has been set.

HEAT BUTTON (TURN ON HEAT) 	Press the HEAT button once. A red LED indicator light will come on, and the display shows H1 for Low Heat. Press the HEAT button again to activate H2 (High Heat). High fan speed is the default. Note: When the heater is on, the LED light behind the grille will be red to indicate the product is in heating mode.
HEAT BUTTON (TURN OFF HEAT) 	Press HEAT button a third time to turn off the heat. Note: The fan will continue to run for 1 minute to dissipate the heat within the unit.
TEMPERATURE BUTTONS 	The heater temperature can be set between 60°F to 90°F (16°C to 32°C). The temperature display can be changed between °F and °C by pressing the TEMP+ and TEMP- at the same time for 3 seconds. Press TEMP+ to increase the temperature setting and TEMP- to decrease the temperature setting.

Usage Instructions

POSITION OF THE APPLIANCE

1. The product is recommended for use in a single, closed room up to 165 square feet and the heating function comfortably heats up to 600 square feet.
2. Place heater upright when using to ensure normal operations.
3. **DO NOT** place the heater near flammable objects, such as curtains, to avoid risk fire.

WARNING

NO SERVICING of the internal or electrical parts should be performed by the consumer. **DO NOT service the unit yourself.**

Care & Maintenance

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the heater with water and do not immerse it in water.
- The housing may be wiped with a slightly damp, lint-free cloth.
- If necessary, dust particles accumulated in the air outlet openings may be removed with a vacuum cleaner.

Troubleshooting

COMMON PROBLEM	POSSIBLE CAUSE	SOLUTIONS
UNIT DOES NOT OPERATE	1. The power switch is not turned on.	1. Turn the power switch in the back on and press the power ON button to turn on the heater.
	2. Not plugged in.	2. Check that the power cord is plugged in to a properly grounded outlet.
INCREASE IN NOISE LEVEL	1. Air inlet or air outlet is blocked.	1. Make sure the air inlet and outlet are not blocked.
	2. Filter may be blocked with lint, dust or pet hair.	2. Check and clean or replace the filter if necessary.

Limited Warranty

KEEP THIS WARRANTY

Always specify model and serial numbers and/or date code when communicating with customer service.

We reserve the right to amend these specifications at any time without notice.

The only warranty applicable is our standard written warranty. We make no other warranty, expressed or implied.

YOU SHOULD FIRST READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO USE THIS PRODUCT.

- A. This limited warranty applies to repair or replacement of product found to be defective in material or workmanship. This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty.

RENOVATION BRANDS, LLC IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product from the original date of purchase.

2. At its option, Renovation Brands, LLC will repair or replace this product if it is found to be defective in material or workmanship.
3. This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.

CountryLivingTM

Thank you for purchasing our Infrared Heater!

Each unit has been manufactured to ensure safety and reliability.
Before first use, read the instructions carefully and keep it for further reference.

Questions, problems, missing parts?
Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Retain this manual for future use.